


**Missed approach:** Climb on the runway axis until 1 000 Ft QNH, then turn right climbing to 2 000 Ft and join "OT" VOR.

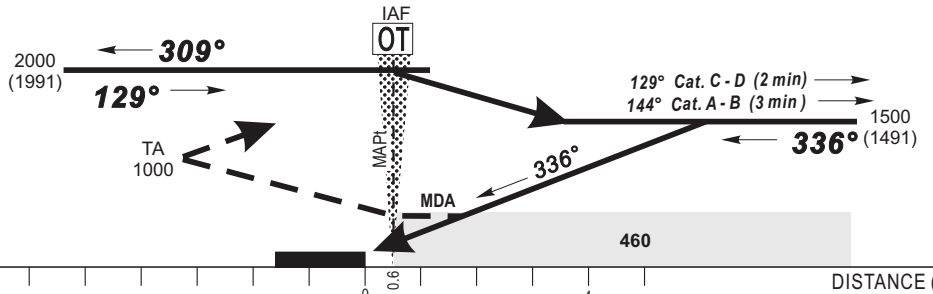

AMDT 12/18: NORMALIZATION

CAT	VOR Y				(*) CIRCLING				RVR for take-off			
	OCA (OCH)	MDA MDH	RVR		OCA (OCH)	MDA MDH	VIS		CAT A - B - C	CAT D		
A	443 (434)	460 (450)	1500		450 (441)	460 (450)	1500		400	400		
B	443 (434)	460 (450)	1500		512 (503)	520 (510)	1600					
C	443 (434)	460 (450)	1800		611 (602)	620 (610)	2400					
D	443 (434)	460 (450)	2000		611 (602)	710 (700)	3600					

Note: (\*) Daytime only.

KT	MIN	SEC	KT	MIN	SEC
90			140		
100			150		
110			160		
120			170		
130			180		